

Updating the firmware on a C4025 nanoSwitch SD Card

The latest firmware for the nanoSwitch SD card in a zipfile is available at <http://www.microswitch.co.uk/NANO>

The following steps will need to be taken to update the card.

1. Turn the nanoSwitch off and remove the SD card from the C4025 processor card.
2. Insert the SD card into the SD card reader on a PC
3. Open windows explorer and find the SD card – It should have the label “NANO” or “Secure Digital storage device”
4. Go to the “**BOOT**” folder on the SD card
5. Rename the “**BOOT.EBI**” and “**BOOT1.EBI**” to “**BOOTx.EBI**” and “**BOOT1x.EBI**” respectively
6. Copy the files “**BOOT.EBI**” and “**BOOT1.EBI**” from the zip file to the “**BOOT**” folder on the SD card
7. Remove the SD card from the PC using the correct procedure (safely remove hardware, etc)
8. Insert the SD back into the nanoSwitch and turn on.